

Auto Turn Off TV	Devices	<ul style="list-style-type: none"> • Disable • When S0 to S3/S4/S5 • When S0 to S4/S5 	<p>Determines what happens to the TV when the Intel NUC goes to sleep or is shut down.</p> <p>Disable (default) - TV stays on when Intel NUC is shut down or enters a sleep state. When S0 to S3/S4/S5 - TV turns off when Intel NUC enters S3/S4/S5 state. When S0 to S3 - TV turns off when Intel NUC enters S3 state. When S0 to S4/S5 -TV turns off when Intel NUC enters S4/S5 state.</p>
Auto Turn On TV	Devices	<ul style="list-style-type: none"> • Disable • From S3/S4/S5 Boot • From S3 Resume • From S4/S5 Boot 	<p>Determines what happens to the TV when the Intel NUC is turned on or resumes from a sleep state.</p> <p>Disable - TV does not turn on when Intel NUC is turned on or resumes from sleep state. From S3/S4/S5 Boot (default) - TV turns on when Intel NUC is powered on or resumes from S3/S4/S5 state. From S3 Resume - TV turns on when Intel NUC resumes from S3 state. From S4/S5 Boot - TV turns on when Intel NUC is powered on or resumes from S4/S5 state.</p>